
Servicing LEXS

- To avoid personal injury, disconnect power to the fixture and allow it to cool down before performing maintenance.
- Perform visual, electrical, and mechanical inspections on a regular basis. The environment and frequency of use should determine this. However, it is recommended that checks should be made at least once a year.
- The external glass should be cleaned periodically to ensure continued performance. Clean the glass with a clean, damp, non-abrasive, lint-free cloth. If this is not sufficient, use a mild soap or a liquid cleaner. Do not use an abrasive, strong alkaline, or acid cleaner as damage may occur.
- Inspect the cooling fins on the fixture to ensure that they are free of any contamination (i.e. excessive dust build-up). Clean with a non-abrasive cloth if needed. Mechanically check to make sure all parts are properly assembled.
- · Electrically check to make sure that all connections are clean and tight.



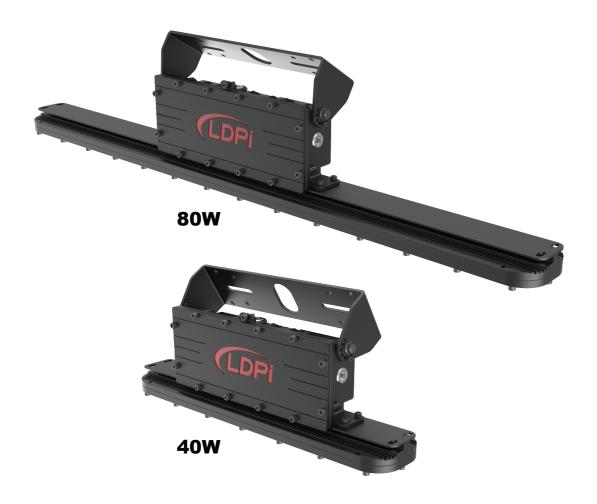

# INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

# LEXS LED EXPLOSION PROOF LIGHTING FIXTURES

Class I Div. 1 (Grps C,D) / Class I Div. 2 (Grps A,B,C,D)
Suitable for locations having deposits of readily combustible paint residues
(Suitable for Class I, Division 1)

### **WARNING!**

- 1. TO PREVENT THE RISK OF ELECTRICAL SHOCK DEACTIVATE/DISCONNECT THE POWER SUPPLY BEFORE INSTALLING THE FIXTURE.
- 2. THE DRIVER IN THIS FIXTURE IS DESIGNED TO OPERATE ON GROUNDED NEUTRAL SYSTEMS ONLY.
- 3. THIS FIXTURE SHOULD BE INSTALLED BY QUALIFIED TECHNICIANS IN STRICT ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ANY LOCAL REQUIREMENTS.

#### **Operational Data**

- Operate this fixture at its rated voltage. Do not install where the marked operating temperature exceeds the ignition temperature of the hazardous atmospheres. See fixture label for data.
- 2. This fixture is intended to be connected to a properly installed and grounded UL listed junction box.

### **Housing**

- · Heavy-duty anodized die cast aluminum
- Long lasting and durable powder coat finish
- Over-voltage, and over-heat protection
- Excellent anti-corrosive property


#### Electrical Instructions

### **General Wiring Diagram**

CAUTION: Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.

Connecting panels to the AC source supply:


All fixtures must be individually connected to the AC supply.

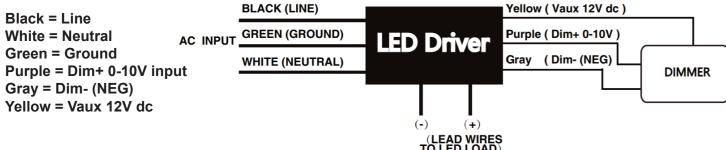


#### **Electrical Connection**

- 1. Loosen the (12) M6 socket head screws on the driver housing cover.
- 2. Connect suitable conduit to the desired location on the driver housing (3/4 NPT).
- 3. Feed wires through conduit into the driver housing and connect to terminal block.
- 4. Re-attach the driver housing cover with the (12) M6 socket head screws and torque to 7 N-m.

#### **Product Dimensions**

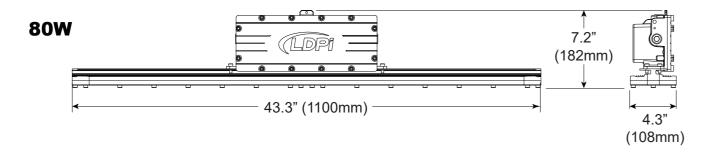

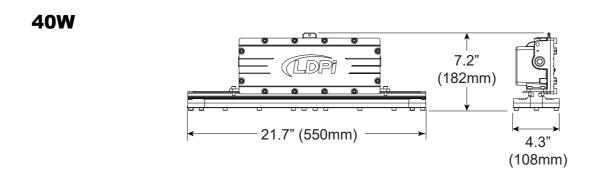



## Not suitable for paint spray application unless aluminum hardware is used for all


**Mounting Options** 


Aluminum hardware is required for paint spray application.


mounting options.

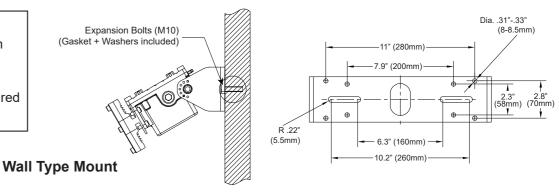

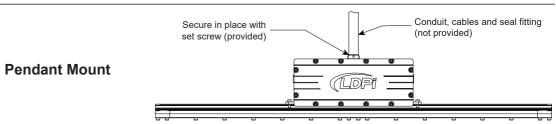

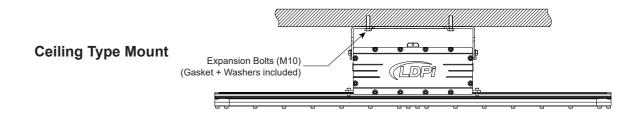

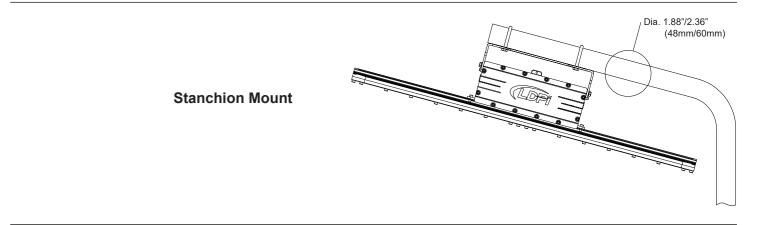

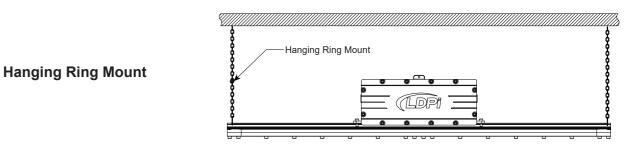

Page: 2 REV: 01.09.24

**LEXS** 

**LEXS**